

ASUS PAD

Screen Saver SOP



Version: 1.x.x

Model: ASUS MEMO Pad ME371MG

Language: Multi-Language


Step1 – Enable Screen Saver

Settings → ASUS customized setting → Enable the Screen Saver

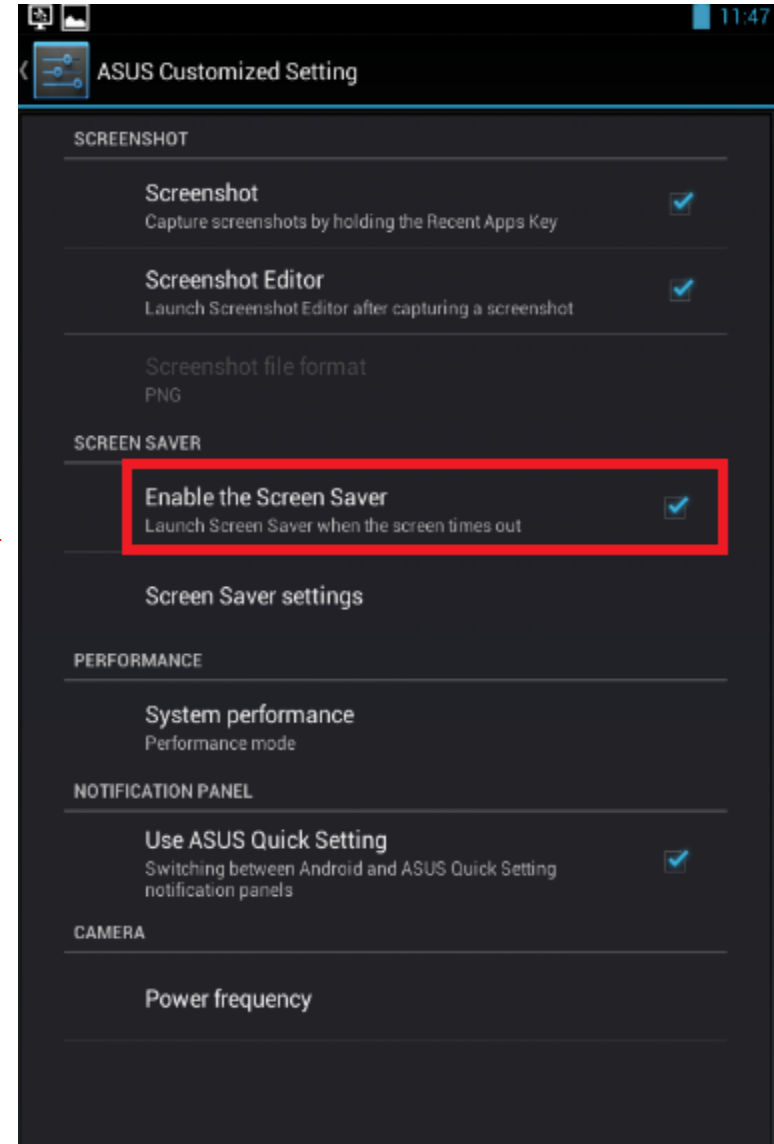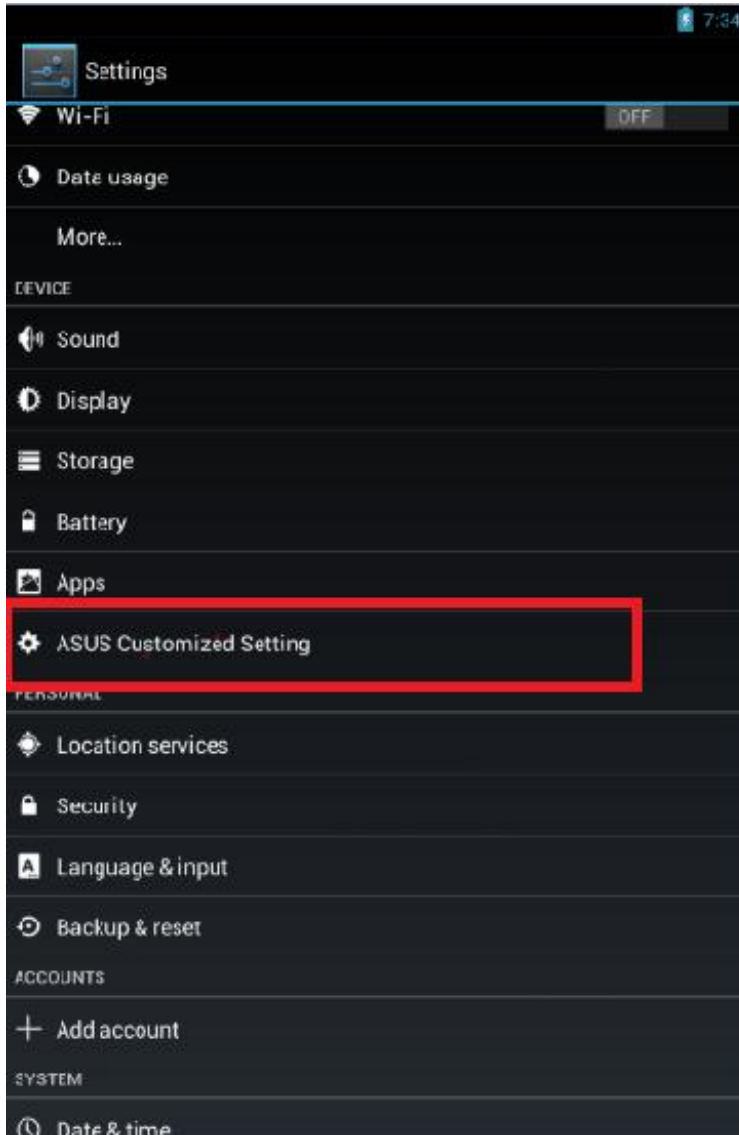

Step2 – Select Screensaver Display Type


- Settings → ASUS customized setting → Screen Saver settings
- Check [Enable the Screen Saver] & [Quick Launch]
- Display type select “Video”
- Select the video file location

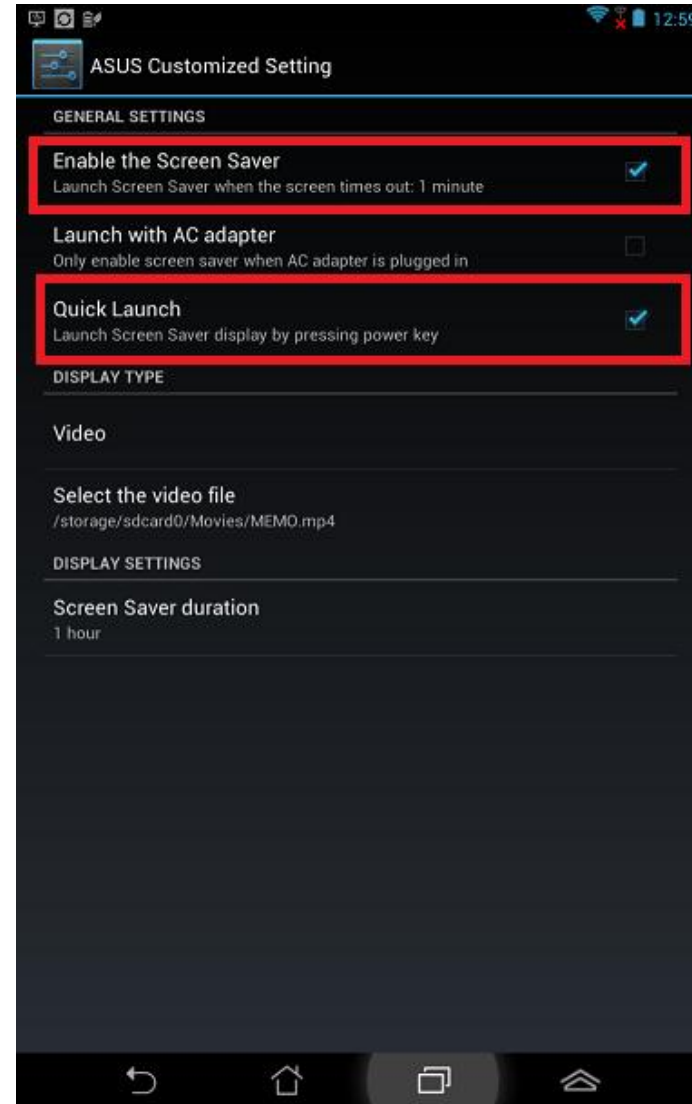

Step3 – Screen Saver settings

- General Settings
- If you enable “Launch with AC adapter “

Need to plug the charger when the screensaver is playing to ensure ample power for your device.



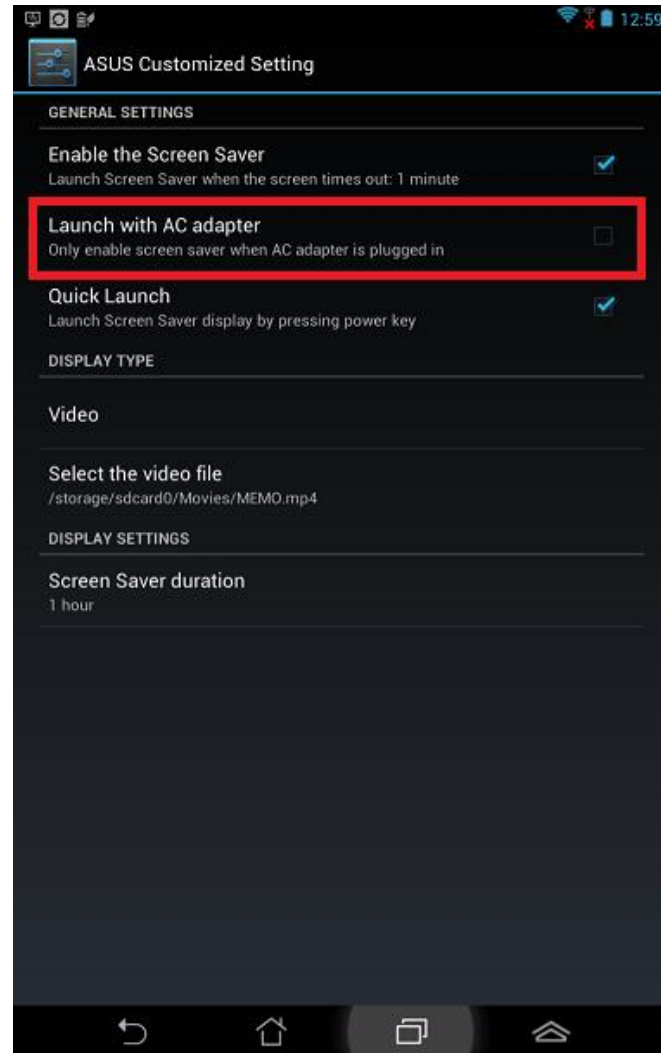


Step4 – Screen Saver settings

- General Settings
- Enable the Screen Saver


Launch Screen Saver when the screen times out

(Time out =The device goes into sleep mode and it based on the setting of Sleep)

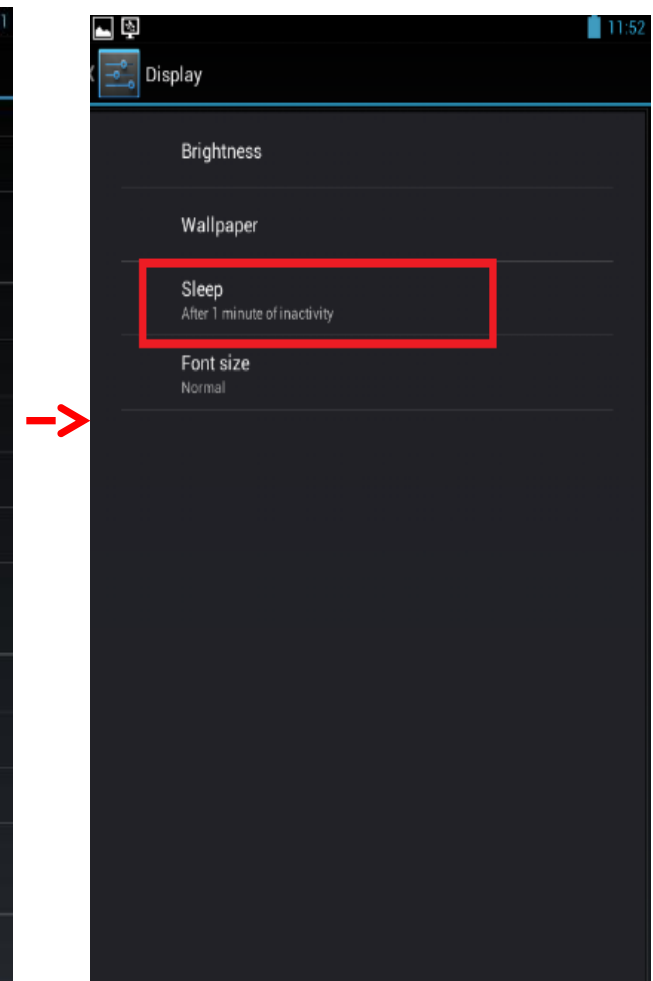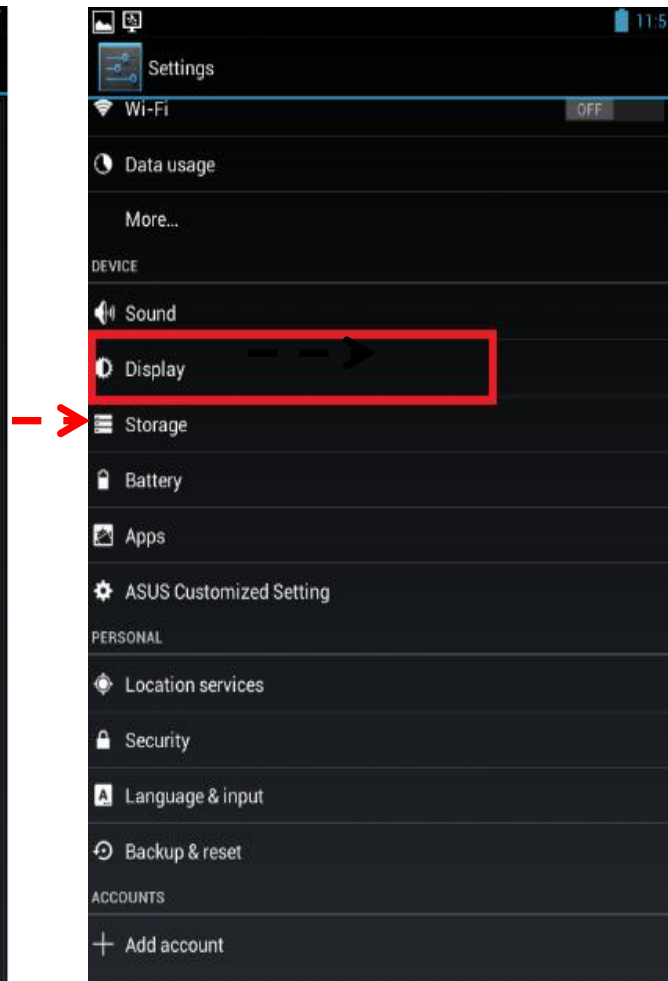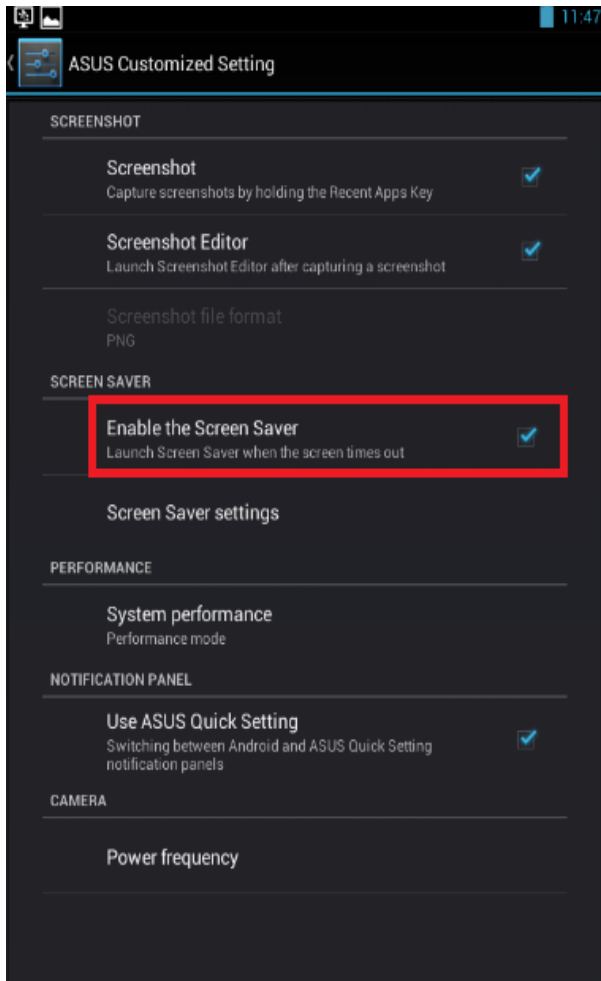

Step5 – Screen Saver settings


- General Settings
- If you enable “Quick Launch “
Launch Screensaver display by pressing power key

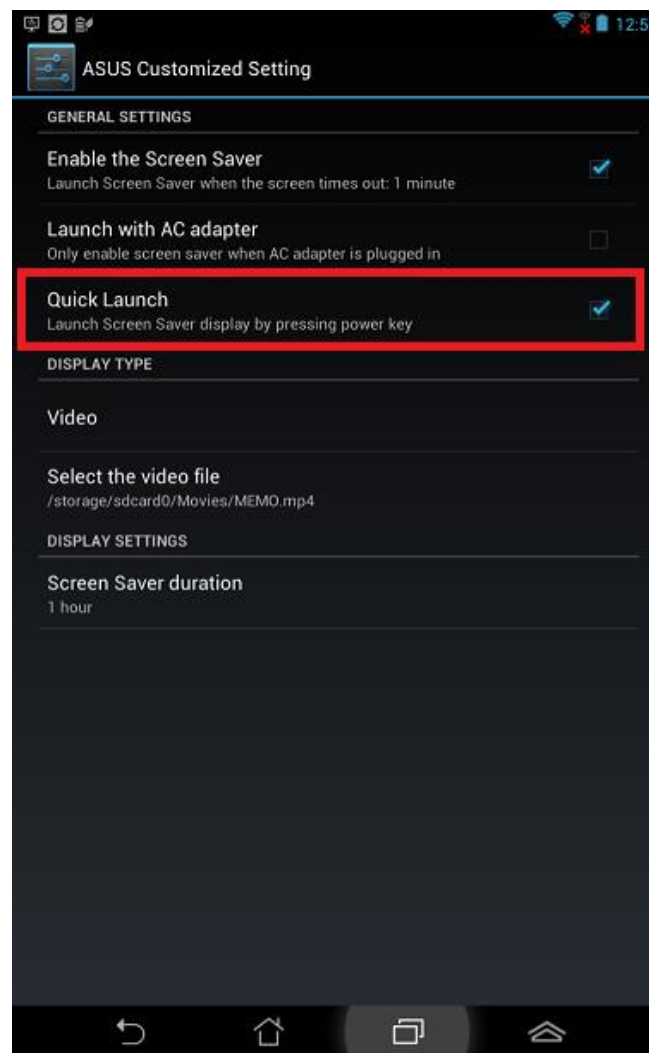

Step6 – Screen Saver settings

- Display Settings

You can set Screen Saver duration (30 minutes,1 hour..)

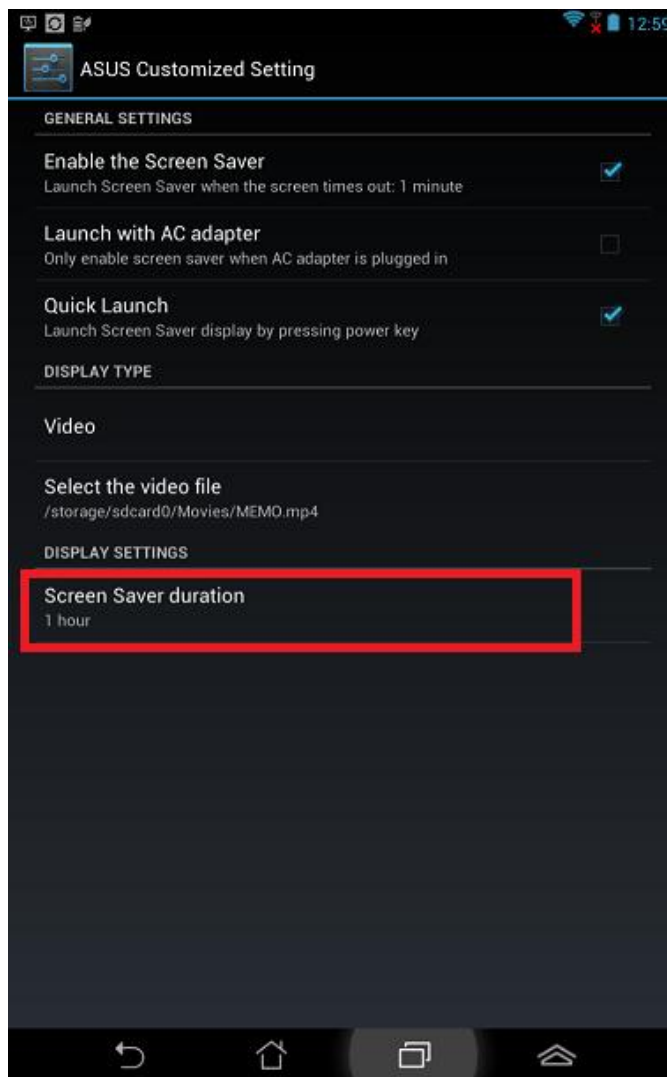

THANK YOU

ASUS[®] Inspiring Innovation · Persistent Perfection