## Demo SOP for ME 571K

Launcher Mode Setup (deactivation)

Step1 – Settings

Step2 – Uninstall



	Launcher Mode Setup – Settings				
Tap [Please s	elect a language for Demo Mode] 5 times until the				
device shows	s to [Demo Mode or Launcher selection window]				
	Language				
	Please select a language for Demo Mode.				
	Once selected tap confirm to exit the Language Settings				
	English (United States)				
	français				
	español				
	Confirm				
	Ĵ Ĉ				

2.





Tan [Anns]	
լզի [Կիիշ]	☐
	Settings
	€l Sound
	O Display
	🔳 Storage
	Battery
	Apps
	≜ Users
	PERSONAL
	Location access
	🖨 Security
	Language & input
	Backup & reset
	ACCOUNTS
	8 Google
	+ Add account
	SYSTEM
	O Date & time
	Construction Accessibility
	<ol> <li>About tablet</li> </ol>
	Ū Ū

	Launcher	Mode Setup	– Uninstall
6.	Tap [Demo Mode]		
	C Apps		£ <table-cell> 1 2:21</table-cell>
		DOWNLOADED	RUNNING
	Demo Mode		
	ES File Explo	rer	
	3.70B smod	Invina Denge	2208 free

			£ 5	2:21
( =	App info			
	Demo Mode version 0.1.1			
	Force stop		Uninstall	
	Show notifications	_		
	TORAGE			
	Total		1.6	SGB
	App Data		1.6	SGB
	2013		Clear data	ONB
		16	Great Gallar	
	Cache		240	OKB
			Clear cache	
		1		
	AUNCH BY DEFAULT /ou/we chosen to launch this ap	p by default for some	actions.	
			Clear defaults	
P	ERMISSIONS			
- 11 - 11 - 11 - 11 - 11 - 11 - 11 - 1	<ul> <li>diverts on the totage</li> </ul>	ng on your tablet:		
	<ul> <li>this may cost yo</li> </ul>	u money		
	$\Psi$ modify or delete the	contents of your U	SB storage	
	Ind accounts on the	device		
_	(m)		(engl)	

	Launch	er Mode Se	tup – U	Ininstall	
Select [OK]					
	Baving screenshe	R.			
c					
	Demo l	Mode_ 11.1			
		🛕 Demo Mode			
		Do you want to unins	tall this app?		
		Manufa .			
		Calcel .	UK		
	6,035				
	R. Ted acc				
		ů O			
_					1

8.



## Launcher Mode Setup – Settings

## 11. Select [OK]

 Wait until the device powers of. Then, press and hold the power button for 2 seconds to turn on the device.



