


1. Simplified installation. First to key in the password in calculator app turn on demo app.

2. Enter pin code: [πεπε741603επεπ]

3. Tap [=] to trigger demo app




4. If pop up below warning message, choose [OK] → Welcome to Asus Demo 2.0!

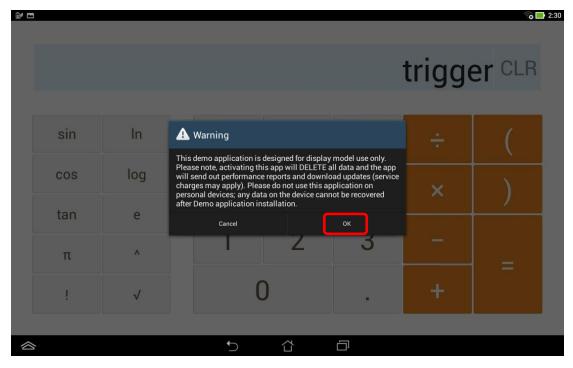


i. Go to http://www.asus.com/microsite/demo/Demo2.0Sop.htm for more detail information.

Image update:

5. If pop up warning message: "Warning: APD or ADF does not exist" as below

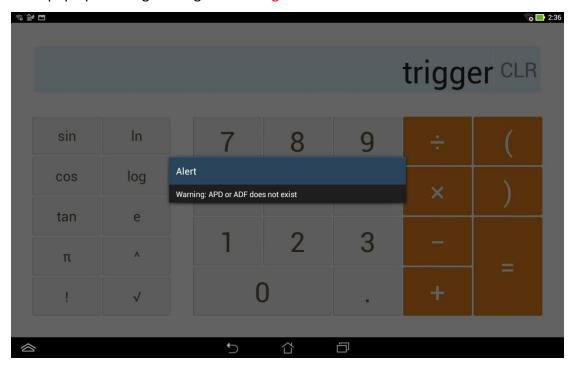


i. Go to [Settings] -> [About] -> [Build number] to check your SKU

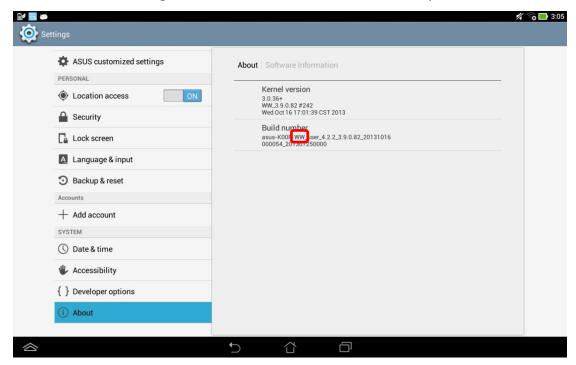

ii. Base on your SKU to download image from:

http://www.asus.com/microsite/demo/MeMO Pad10.htm

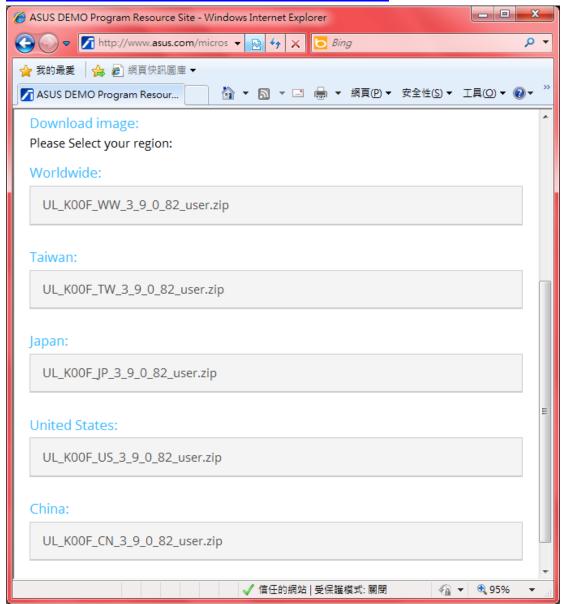


iii. Copy the image to MicroSD card (make sure *only one image file in your MicroSD card, or device can't detect it)


iv. insert MicroSD card to the device and will see \triangle on the top left corner




v. Scroll down [ASUS Quick Setting] from top and tap [System Update File Detected]

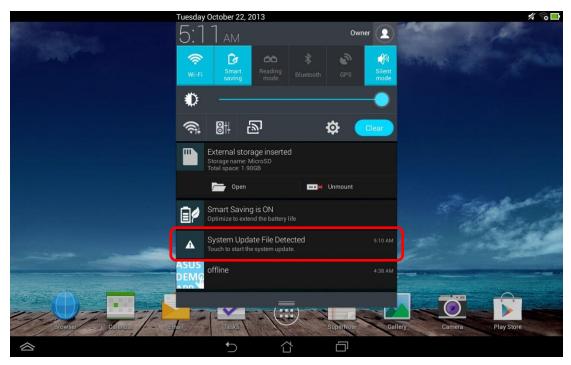

vi. Tap [OK]

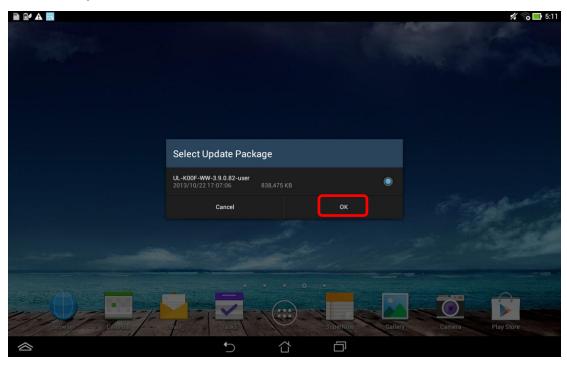

vii. Tap [OK] again

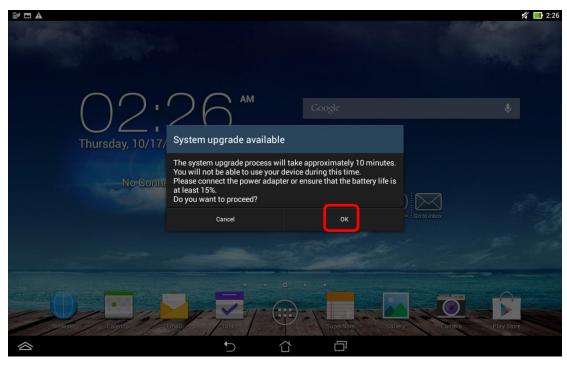

viii. Wait for system update and reboot automatically

ix. Tap [OK] after reboot




x. Go to http://www.asus.com/microsite/demo/Demo2.0Sop.htm for more detail information.


Content update:

- 6. If left-top corner has demo app blue icon but no demoapp content show up
- 7. Download "ME102A_Release_Signed_AsusLiveDemoService_20131120.apk" & "APD_offline_102A.zip" from


http://www.asus.com/microsite/demo/MeMO Pad10.htm

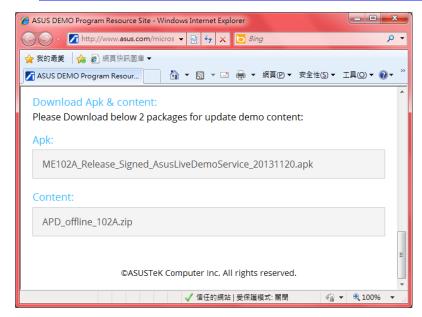


i. copy "ME102A_Release_Signed_AsusLiveDemoService_20131120.apk" & "APD_offline_102A.zip" to ME102 device's internal storage

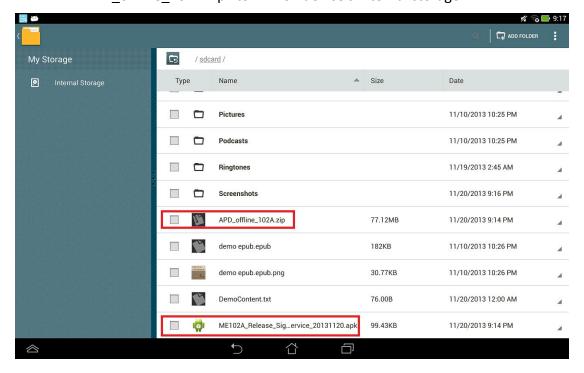


- ii. Tap "ME102A_Release_Signed_AsusLiveDemoService_20131120.apk" to install
 - i. Tap [Settings]

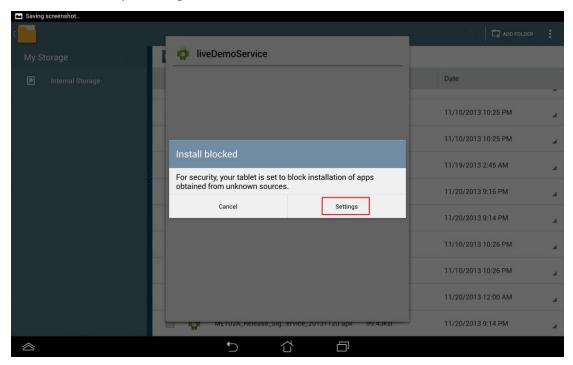

ii. Check [Unknown sources] and tap [back key]

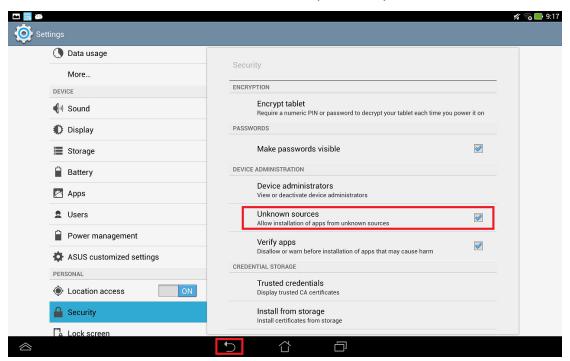


iii. Tap "" and tap [Install]

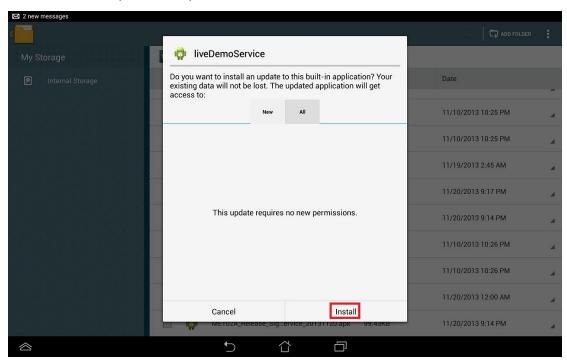


- 8. Key in the password in calculator app to turn on demo app again.
 - i. Enter pin code: [πeπe741603eπeπ]
 - ii. Tap [=] to trigger demo app



iii. If pop up below warning message, choose [OK]

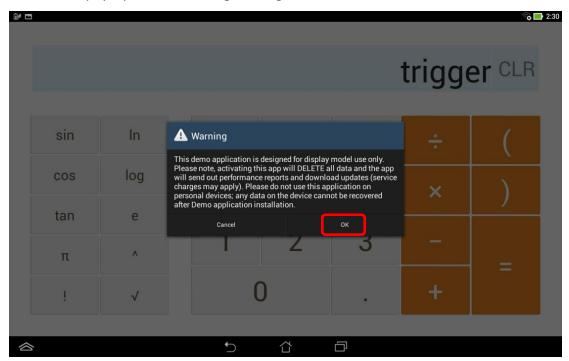

iv. Enter the pin code: [741603] when below warning message pop up

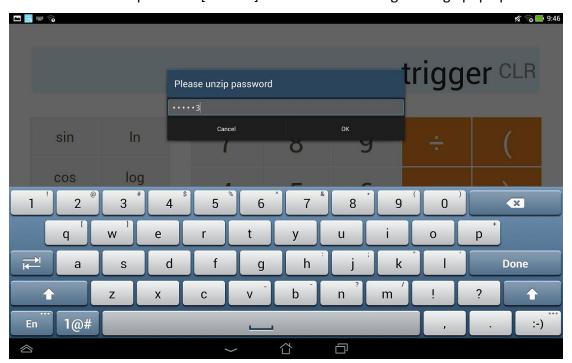

9. Wait for update and finish.